



Big Sun Industry Co., Ltd.

LED Tube Light Installation Guide


5F, No.398, Keelung Rd. Section 1, Taipei (110), Taiwan.

Tel: 886-2-2758 3131 Fax: 886-2-2758 2233

E-mail: sales@bsunlight.com Http://www.bsunlight.com

Installation Instruction:

1. Make sure to Turn-Off power for safety first.
2. Led Tube Light doesn't need Starter and Ballast; please make sure both of them are disconnected.

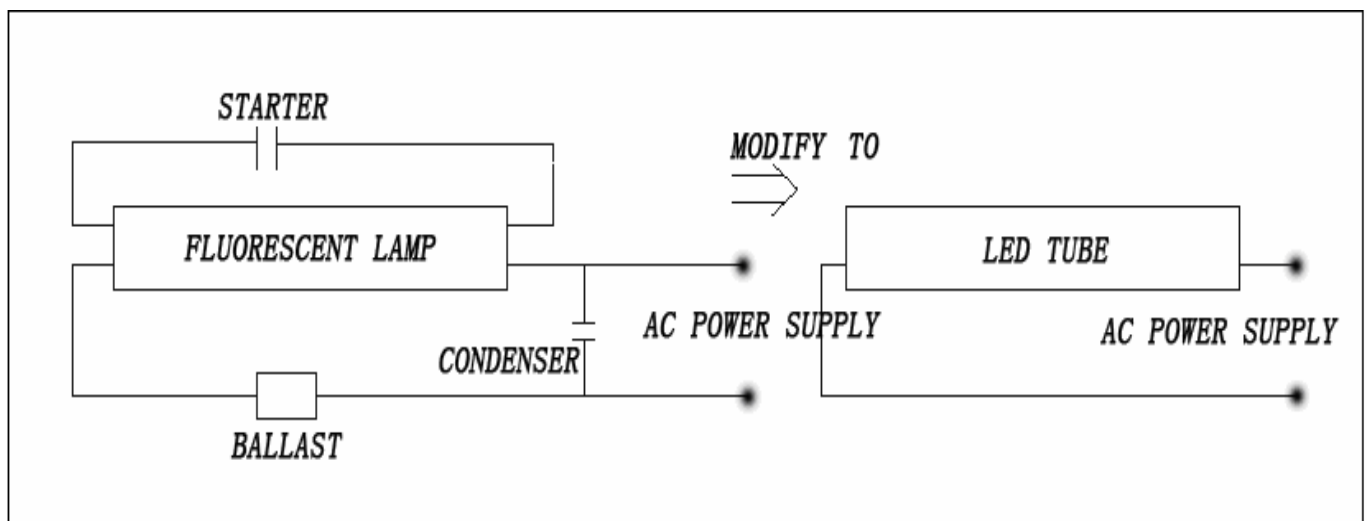

Copyright (C) 2009 Big Sun Industry Co., Ltd.